


## The Nest Healesville Accommodation – Oven Instructions

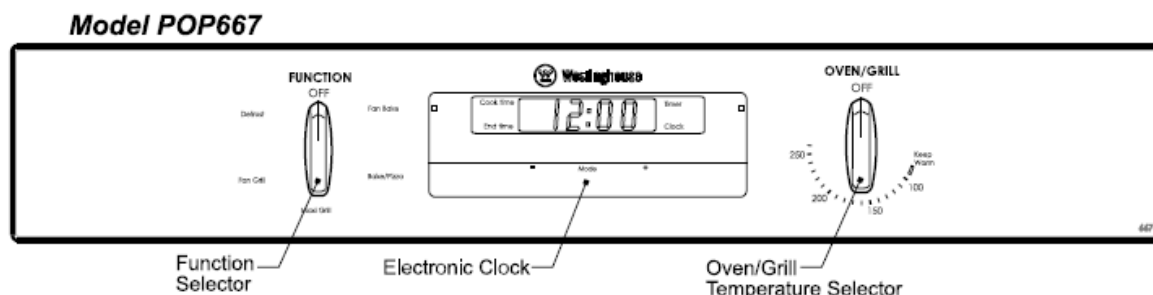

### Functions

- Fan Bake** Fan forced heat is circulated via the fan, for multi shelf cooking. Good for food reheating or complete oven meals. Can cook faster than just Bake, watch out!
- Bake / Pizza** Top and bottom elements, no fan. Good for single trays of biscuits, scones muffins, casseroles, roasts, and possibly pizza
- Maxi Grill** Both top elements on. Good for steak, chops sausages and fish. Use with door closed. Preheat the grill first for 3 minutes for maximum grill-ness.
- Fan Grill** One top element on and also the fan. Offers the benefits of both 'Bake' and 'Grill' without the drawbacks. Gives a more even cooking with large meat cuts.
- Defrost** Low temperature with fan circulation for defrosting and raising your yeast dough or even to dry fruit, vegetables or herbs, how nice.

### Operating your oven temperature selector

A thermostat controls the temperature in your appliance. The temperature can be selected within the specified range. To set the temperature, turn the temperature selector in a clockwise direction to the desired setting. An indicator light above the temperature selector will come on. When the temperature is reached, the heating source switches itself off and the indicator light goes out. When the oven temperature falls below the desired setting, the heating source switches on and the indicator light comes on again. Once the food is cooked, turn the temperature selector back in an anti-clockwise direction. Do not force it right round in a clockwise direction as this will result in damage to the thermostat.



**NOTE:** For multifunction ovens the desired cooking function must be selected before the oven will operate. Once the desired function has been selected, use the temperature selector to set the required temperature.

### OPERATING THE ELECTRONIC CLOCK

#### Electronic Clock

##### Touch Control

##### General features

Your touch control clock has the following features:

- **Timer** – allows you to set a countdown time that will beep when the set time has elapsed.
- **Cooking duration** – You can set a cooking duration. A timer will count down the preset cooking time, beep when the time has elapsed and turn the oven off.
- **End cooking time** – you can set a cooking finish time. A timer will count down the preset cooking time, beep when the finish time has been reached and turn the oven off.
- **Delayed start cooking time** – You can combine the cooking time and stop cooking time to switch the oven on and off at a specific time during the day.

**Note:** Your touch control clock only operates with your main oven.

##### Setting the timer

1. Press "mode" until the "timer" indicator **|** begins flashing.
2. Set the countdown time you want by using – and +. 5 seconds after the last change the "timer" indicator **|** will stop flashing, confirming the timer has been set.
3. To stop the beeper, press –, + or "mode".

