


## The Nest Healesville Accommodation – Washing Machine Instructions

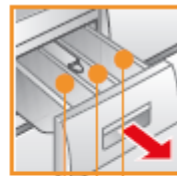


**Compartment II:** Detergent for the main wash, water softener, bleach, stain remover

**Compartment III:** Fabric softener, starch

**Compartment I:** Detergent for pre-wash



Start/ Pause	Additional function	Status Indicators	Programme selector
--------------	---------------------	-------------------	--------------------

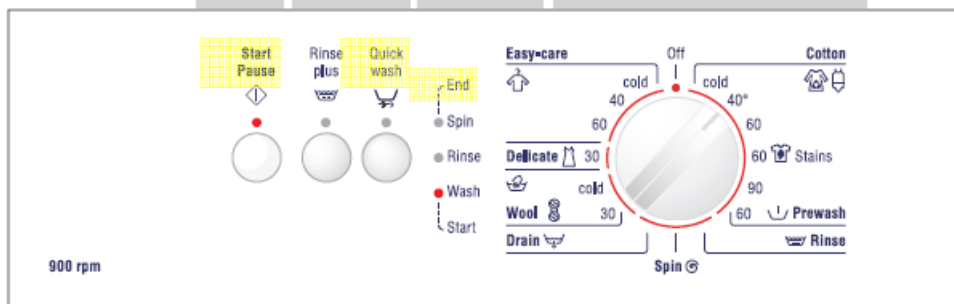

**i** Programme selector for switching the machine on and off and for selecting the programme. Can be turned in either direction.

Programmes	°C	max.	Type of laundry	Additional functions; information
Cotton	cold, 40, 60, 90 °C	6,5 kg	Hard-wearing fabrics, heat-resistant fabrics made of cotton or linen	Rinse plus, Quick wash
Cotton Stains	60 °C			Rinse plus, Quick wash
Cotton Prewash				Rinse plus, Quick wash
Easy-care	cold, 40, 60 °C	3 kg	Easy-care fabrics made of cotton, linen, synthetic fibres or blended fabrics	Rinse plus, Quick wash
Delicate	30 °C	2 kg	For delicate, washable fabrics, e.g. made of silk, satin, synthetic fibres or blended fabrics (e.g. curtains)	Rinse plus, Quick wash; No spin between rinse cycles
Wool	cold, 30 °C			Hand- or machine-washable fabrics made of wool or containing wool

**Additional programmes** Rinse, Spin, Drain

**i** Programmes without prewash - add detergent to compartment II, programmes with prewash - distribute the detergent between compartments I and II.